

Skylink® Wireless Keyless Entry Transmitter

Model 318K

1. INTRODUCTION

In this package, you will find a keyless entry transmitter with 3V lithium batteries and a clip.

Clip



Keyless Entry Transmitter
(Batteries inside)


2. CHANGE THE OPERATION CODE FOR TRANSMITTER

It is recommended to randomly set the operation code for your transmitter and receiver to avoid interference from other devices. Follow the instructions below to change the operation code.


This instruction does not demonstrate how the receiver should be installed, please refer to the user's instructions of the receiver.

- 1 Pry off the cover on the back of the transmitter.


You will see 10 connectors labeled from "1" to "10", as shown. (the connectors setting may not be the same as shown)

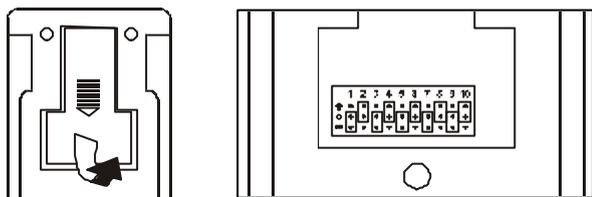

- 2 You can randomly remove some connectors, leaving some in place. A connector can be removed with the clip, as shown.

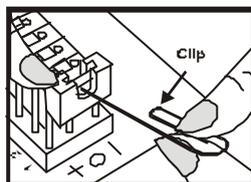


- 3 If the connector is placed on the top and middle posts, that column is set on "+". If the connector is placed on the middle and bottom posts, that column is set on "-". If the connector is removed completely, (not placed on any posts), it is set to "0". (see diagram for examples of how to set a column to the three different positions). When removing a connector to set a column to "0", save the connector in case you change the code at a later date.

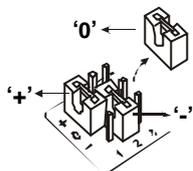

- 4 After setting up the code connectors on the keypad transmitter, you are ready to set the same code on the receiver.
- 5 Enter [0,0,0,0] [#] will open the garage door.

- 6 You can now mount the transmitter on a desired location. Lift up the cover and insert screw above the keypad in the slot provided (a). Remove the battery cover and insert the second screw in the lower slot (b). Tighten all screws. Replace the battery cover, insert and tighten screw (c).

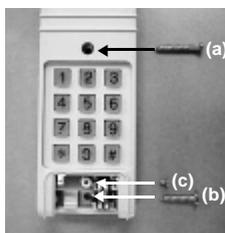

3. KEYPAD OPERATION

NOTE:

The backlight comes on and a beep is emitted when any key is pressed. The backlight of the keypad may not be visible when it is too bright outside. When any key is pressed, the next key must be pressed within 5 seconds or the backlight turns off and the sequence is cancelled. You must begin again.

If the keypad does not emit a beep when pressed, wait a few seconds and press the key again.

4. CHANGE PIN

Follow the instructions below to change the PIN.

To change your PIN:

1. Enter the current PIN, (factory default PIN 0000), press * ,
2. Enter new 4 digit PIN, press * ,
3. Enter new PIN again, press * .

 
For example, if you are changing the PIN number from 0000 to 1234, enter the following sequence, 0000,* ,1234,* ,1234,* .

If confirmed, the backlit LED flashes and the unit emits a long beep.

If you do not hear 3 beeps after the 4-digit PIN and [#] is entered, that means you have entered an incorrect PIN, and the keypad transmitter will not operate your garage door.

5. BATTERY

Two 3 volt Lithium type (CR2032) batteries (included).



Battery Compartment

It is time to change the batteries when the backlight no longer appears.

6. FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

7. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

8. CUSTOMER SERVICE

If you would like to order Skylink's products or have difficulty getting them to work, please :

1. visit our FAQ website at www.skylinkhome.com , or
2. email us at support@skylinkhome.com , or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST.
Fax (800) 286-1320

CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3
Email: support@skylinkhome.com
<http://www.skylinkhome.com>
P/N. 101A261-001 Rev.1
©2005 SKYLINK GROUP