

Universal Keychain Transmitter

Model G6M

1. INTRODUCTION

Congratulations on your purchase of the Skylink® Universal Keychain Transmitter Model G6M. The Model G6M works with the Skylink® Smart Button™. In this package, you will find a keychain remote with 12V battery.


Universal
Keychain Transmitter
(Battery included)



2. PROGRAM A TRANSMITTER TO THE GTR SMART BUTTON™

Refer to the section in the Skylink® model GTR to install the Smart Button™ and follow the instructions below to program the transmitter.

1. With the GTR Smart Button™ connected on your existing wall button. The red light on the Smart Button™ should flash after plugging in the power. If the red light on the Smart Button™ is flashing slowly, that indicates it is in standby mode.
2. Press the learn button on the side of the GTR.
3. Once the learn button is pressed, the red LED will flash quickly. You may release the learn button.
4. Press the button on the transmitter you would like to program.
5. Once the transmitter is programmed, the red LED will flash slowly, in the same way as it flashes in standby mode.
6. You can now operate the garage door opener with this new remote control.

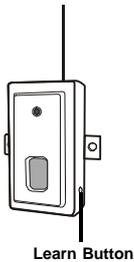

Learn Button

3. TROUBLE SHOOTING

Q: Door opener does not react after pressing the button on the transmitter?

- A:
- Ensure the button on the transmitter is pressed, the red light on the transmitter comes on. Otherwise, check if the battery is inserted properly.
 - Ensure the wires that are previous connected to the wall mounted door control are not loose.
 - Ensure the remote control has been programmed to the Smart Button™. Refer to section 2 for how to program a transmitter to the receiver.


4. REMOVE THE REMOTE CONTROL FROM THE SMART BUTTON™

You can delete the remote control(s) from the Smart Button™, first delete all the remote controls, then learn the ones you would like to keep.

1. Press and hold the learn button for approx 10 seconds on the Smart Button™.
2. The LED will flash rapidly after 10 seconds to indicate all the programmed remote controls have been erased. You may now release the learn button.
3. You have erased all the remote controls in the Smart Button™.

5. BATTERY

12 volt alkaline battery (size 23A) included.

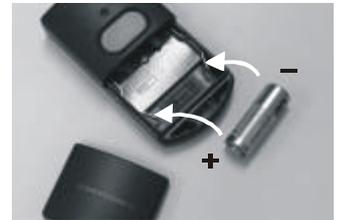

6. ADDITIONAL TRANSMITTER

You can add up to 15 additional transmitters to control the same receiver. Skylink® offers Visor Transmitters and Keypad Transmitters to work with your receiver. For more information, please visit our website at www.skylinkhome.com or contact us.



7. WARNING

DO NOT let children use the garage door transmitter without adult supervision. Children can injure themselves or others by the garage door.

8. FCC

The Garage Door Remote Control is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions :

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

9. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

10. CUSTOMER SERVICE

If you would like to order Skylink's product or have difficulty getting your Skylink remote control to work, please :

1. visit our FAQ section at www.skylinkhome.com, or
2. email us at support@skylinkhome.com, or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST.
Fax (800) 286-1320

CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3
Email: support@skylinkhome.com
<http://www.skylinkhome.com>
P/N. 101Z485
US Patent. D380895
® are registered trademarks of their respective corporations
©2007 SKYLINK GROUP